


LAND ROVER

Discovery Sport

Mud Flaps - Rear *FITTING INSTRUCTION*

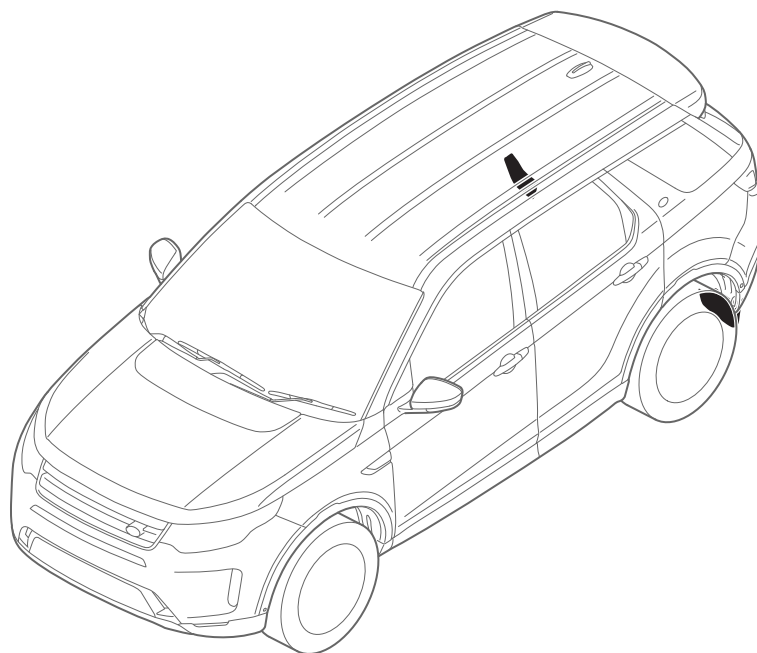

安装说明

挡泥板 - 后部

EINBAUANLEITUNG

Schmutzfänger - Hinten

INSTRUCTION DE MONTAGE

Bavettes garde-boue - arrière

ISTRUZIONI PER L'USO

Paraspruzzi - Posteriori

INSTRUCCION DE MONTAJE

Guardabarros traseros

INSTRUÇÕES DE MONTAGEM

Protetores de Lama - Traseiros

Инструкции по установке

Брызговики - задние

MONTAGEHANDLEIDING

Spatlappen - Achter

取付用マニュアル


マッドフラップ - リア

설치 지침

머드 플랩 - 후면

Instruções de instalação

Para-lamas - Traseiro

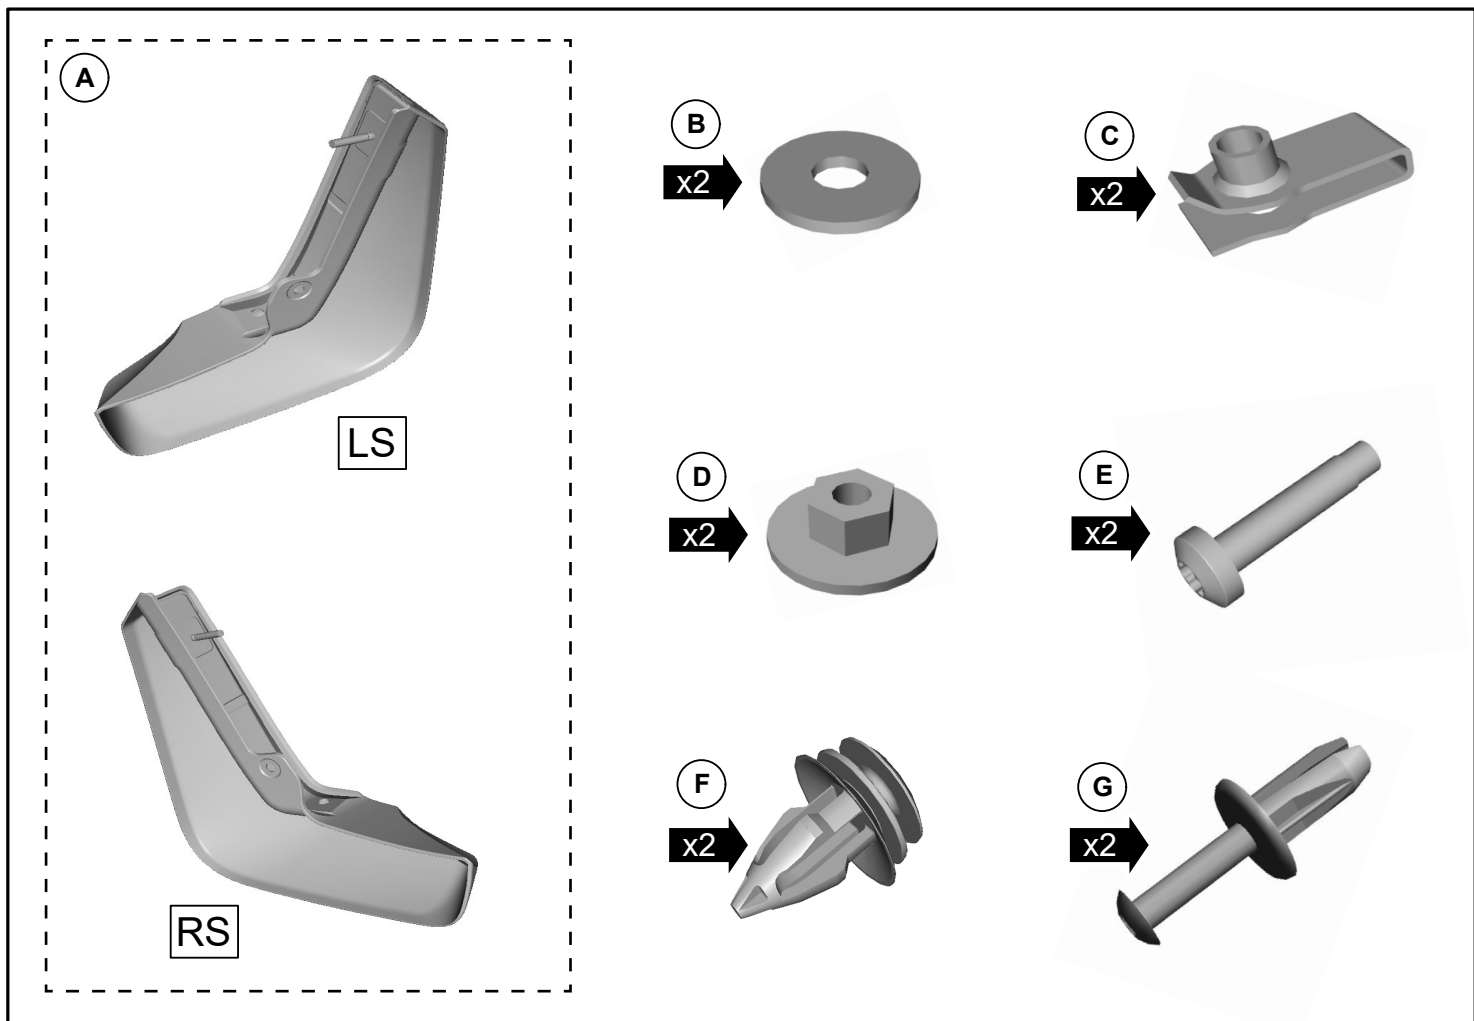

The following instructions are valid for both sides of the vehicle.

以下说明适用于车辆两侧。

Die folgenden Anweisungen gelten für beide Seiten des Fahrzeugs.

Les instructions suivantes sont valables pour les deux côtés du véhicule.

Le seguenti istruzioni sono valide per entrambi i lati del veicolo.

Las siguientes instrucciones son válidas para ambos lados del vehículo.

As instruções seguintes são válidas para ambos os lados do veículo.





Приведенные инструкции действительны для обеих сторон автомобиля.









De volgende instructies gelden voor beide zijden van het voertuig.








車両の両サイドに対して、以下の指示に従う。

다음 지침은 차량 양 측면에 모두 적용됩니다.



As seguintes instruções são válidas para os dois lados do veículo.

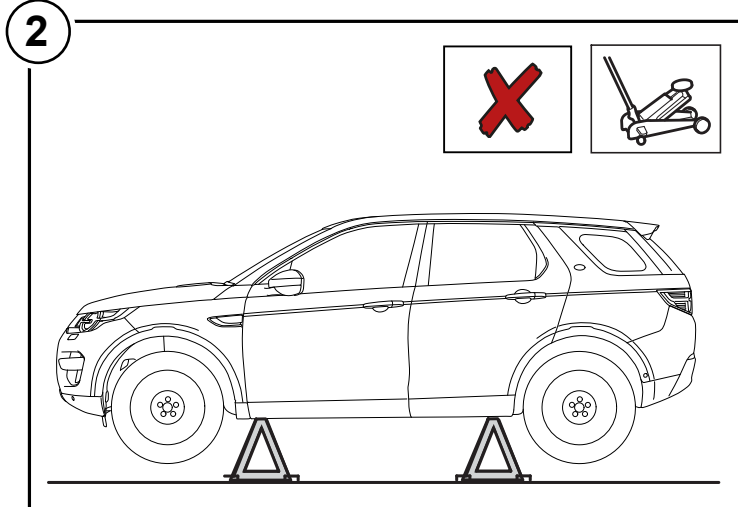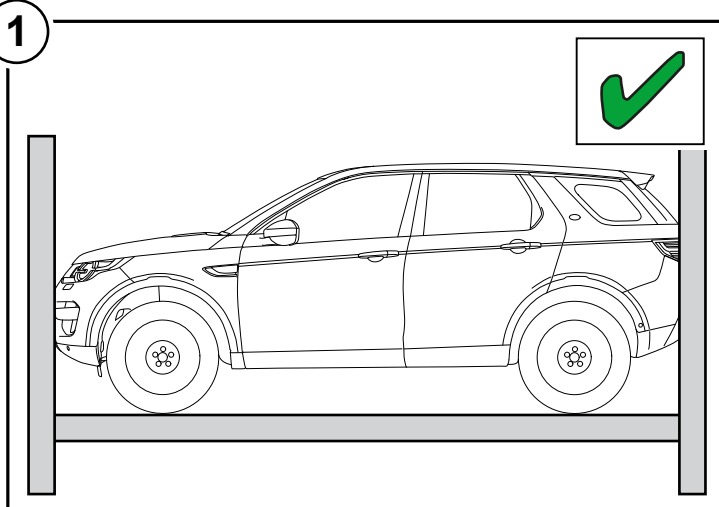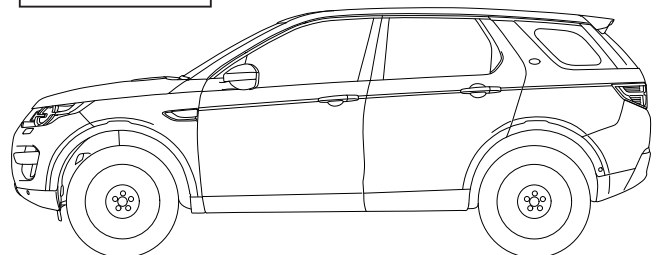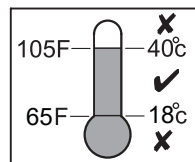

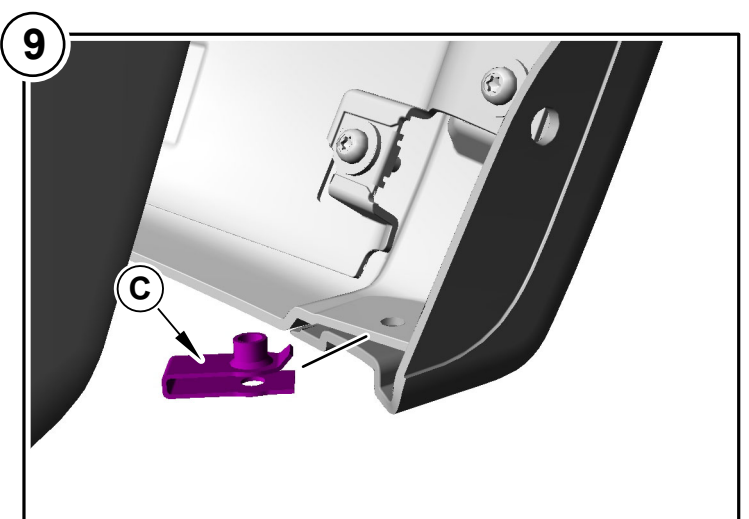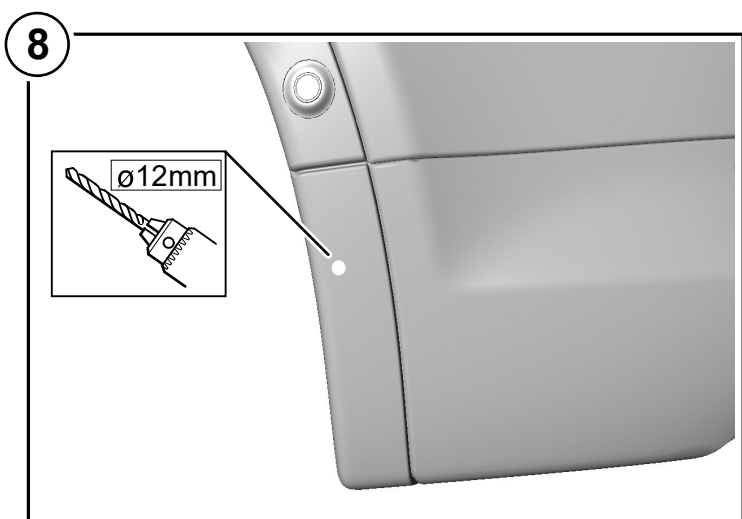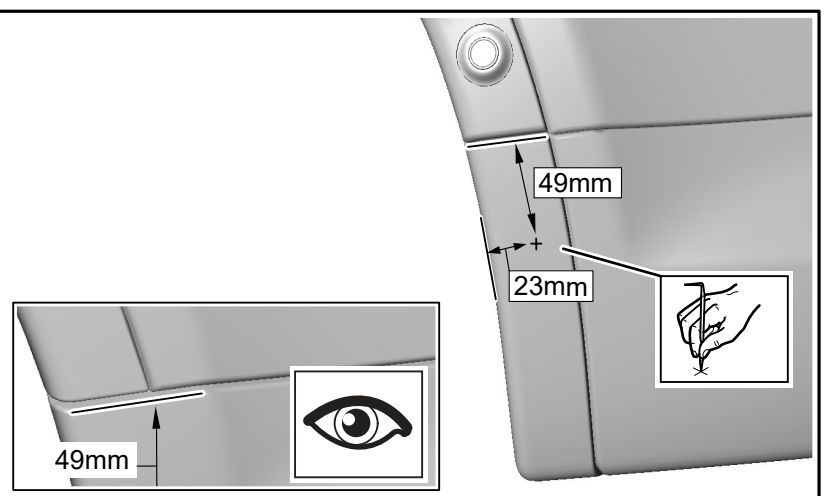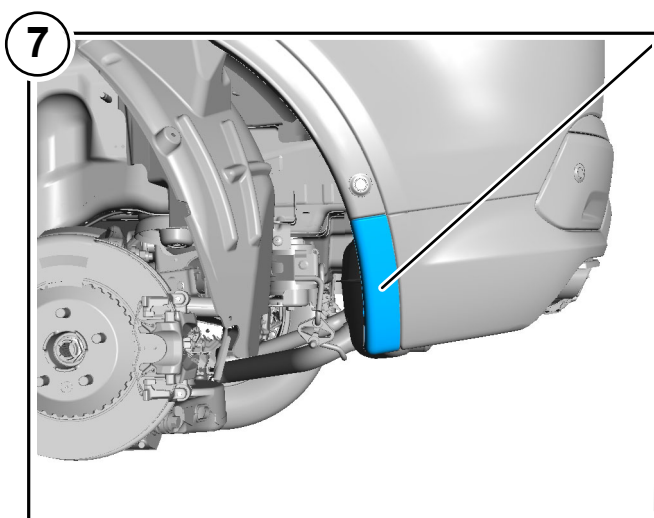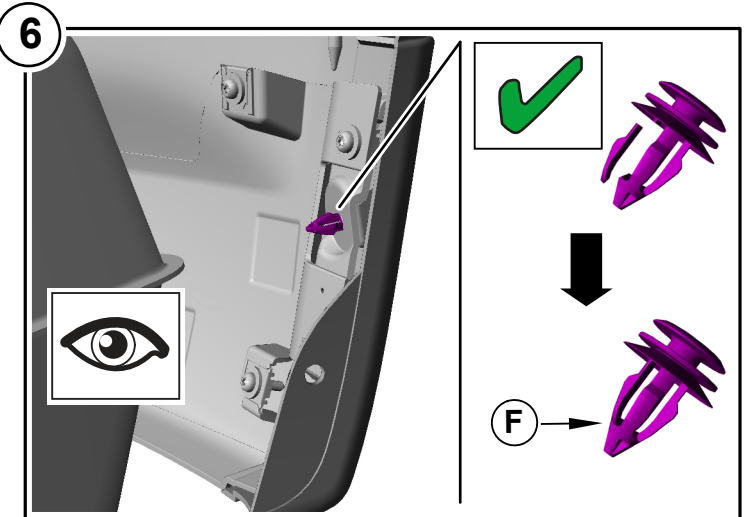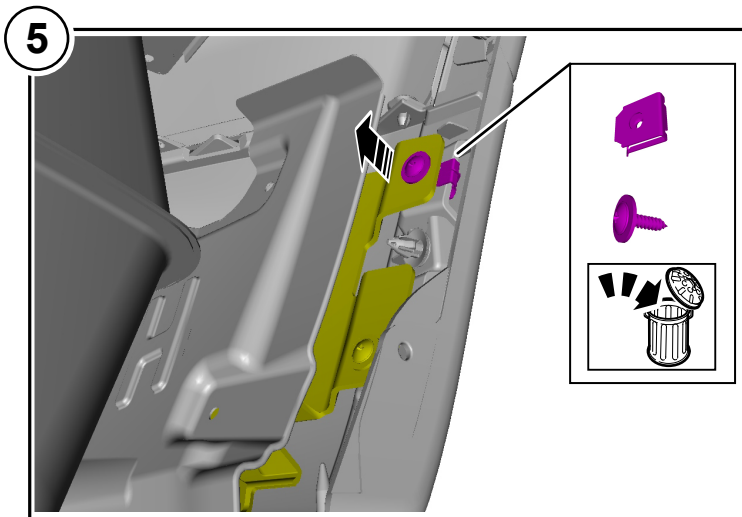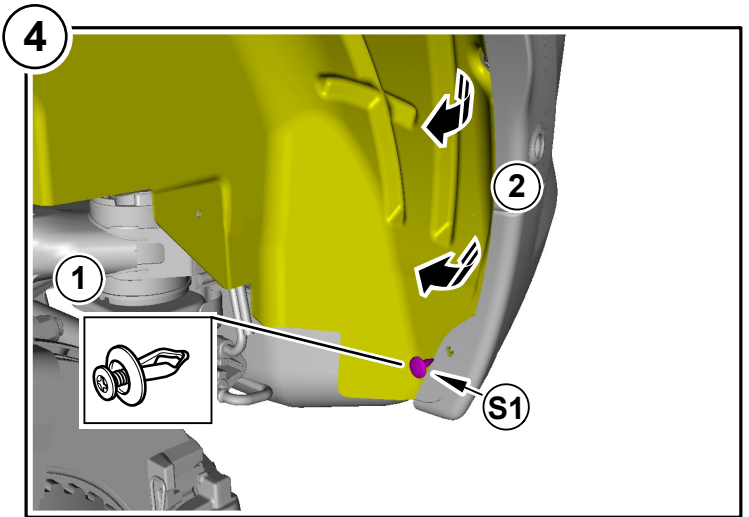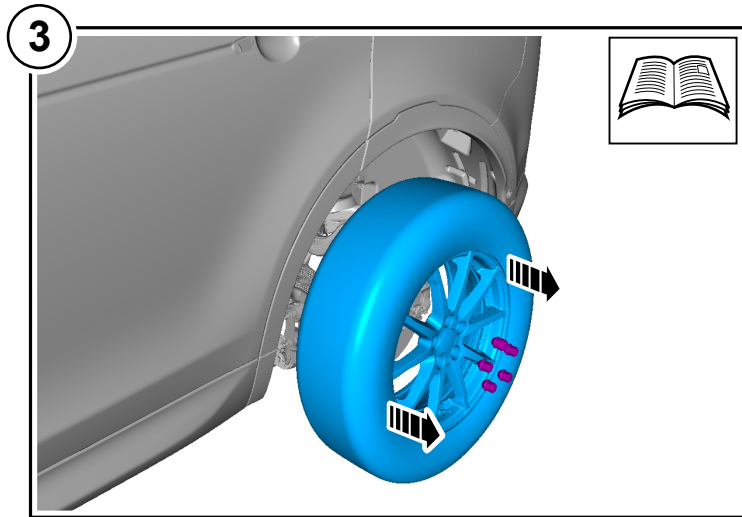


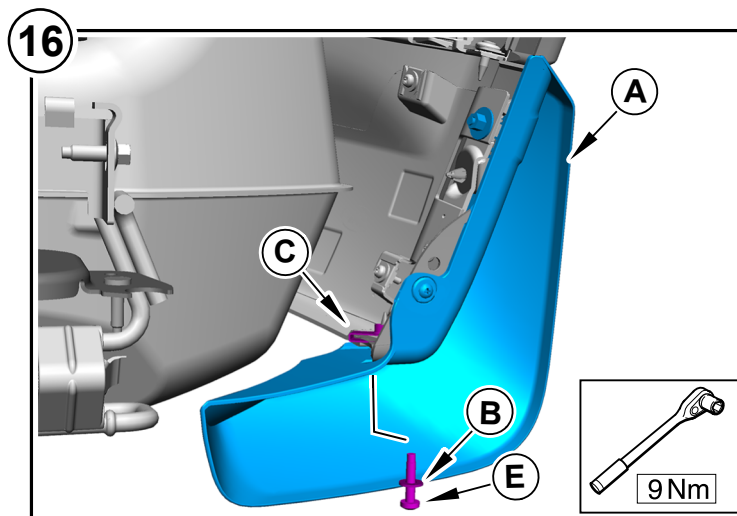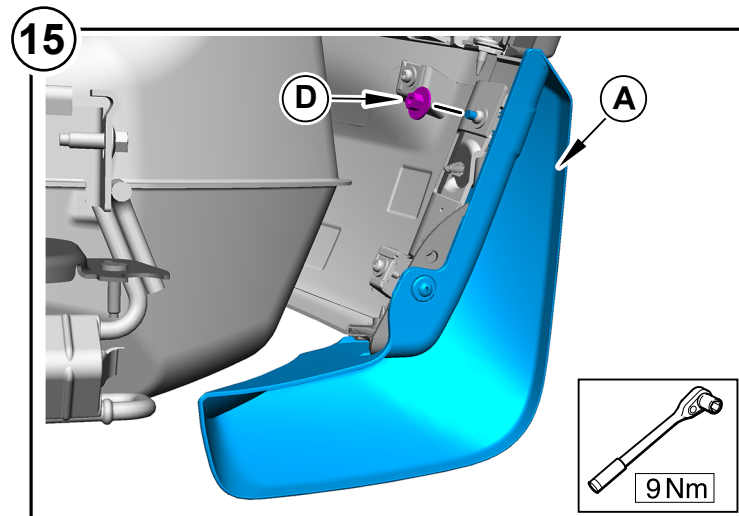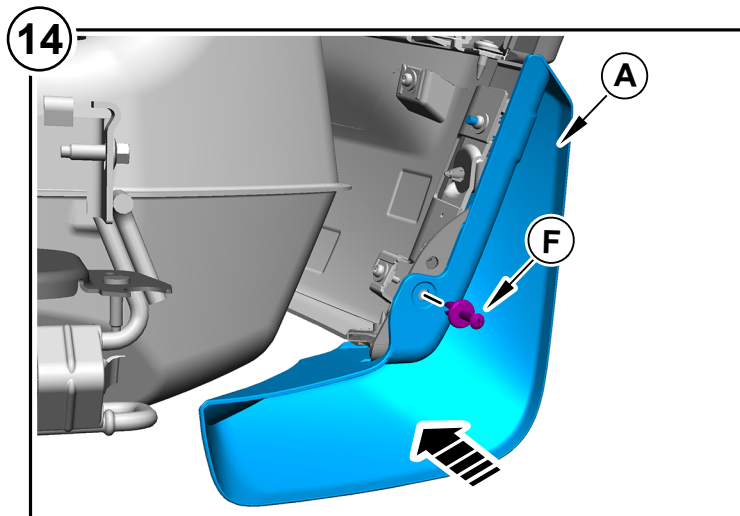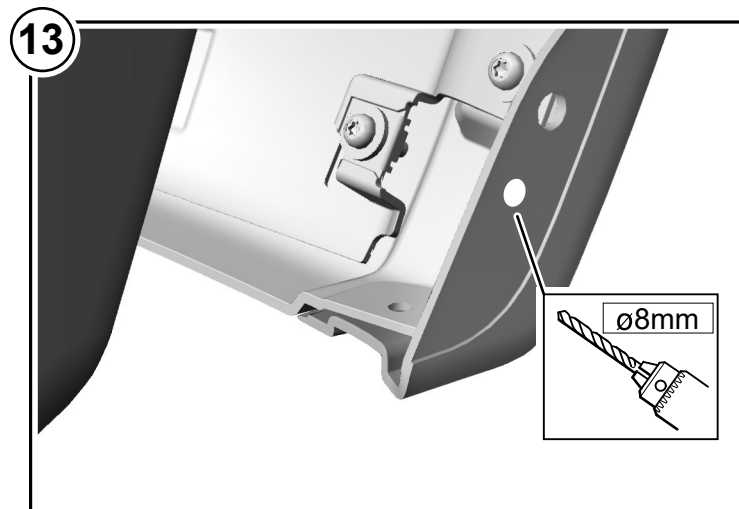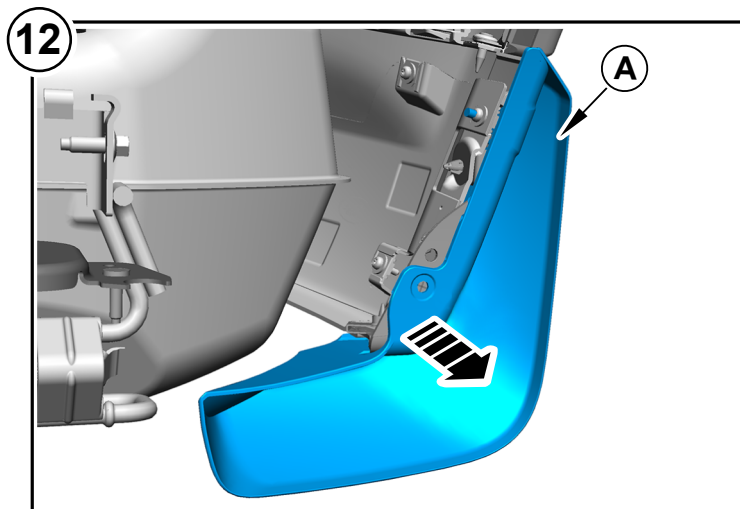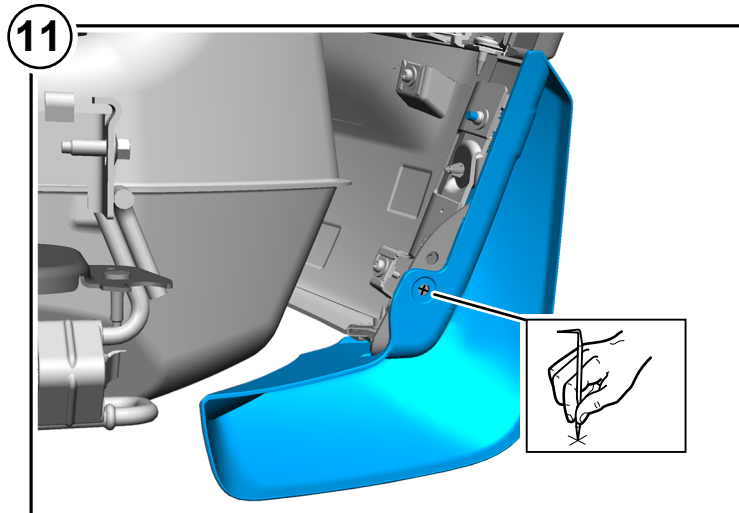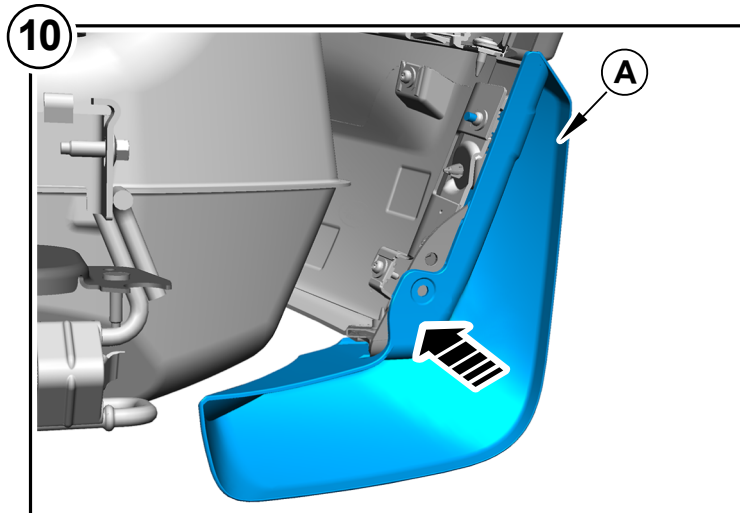

17

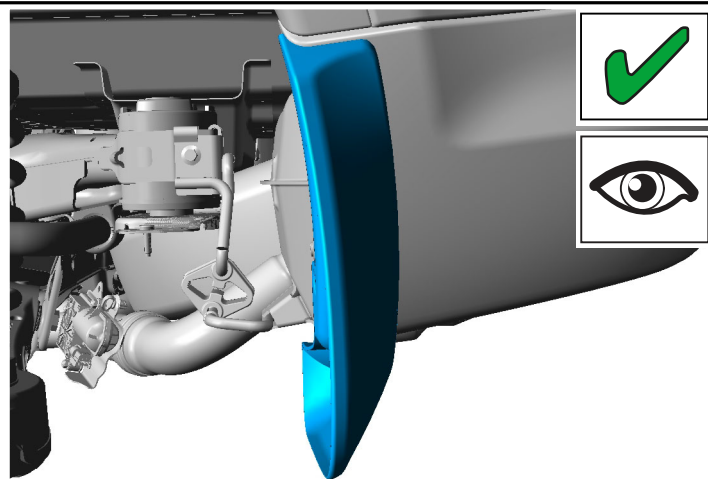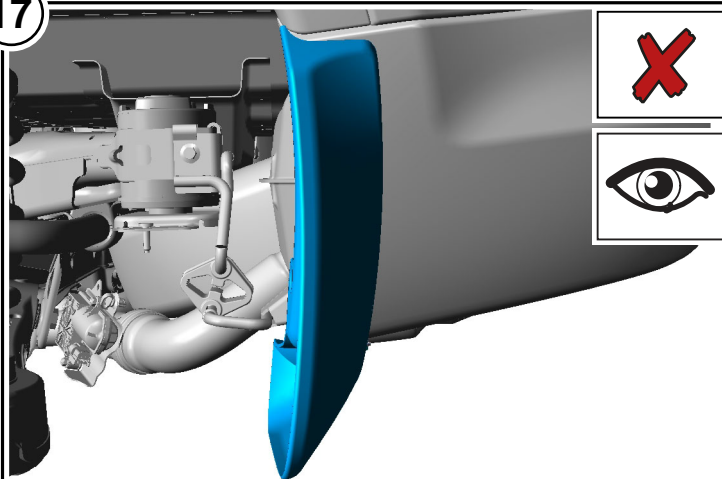

18

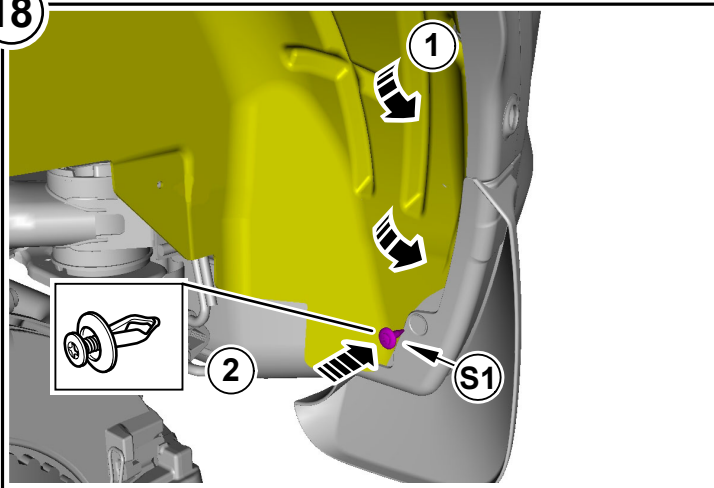

19

